

SONOS DOCK

Product Guide

THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including but not limited to photocopying, recording, information retrieval systems, or computer network without the written permission of Sonos, Inc.

SONOS and all other Sonos product names and slogans are trademarks or registered trademarks of Sonos, Inc. SONOS Reg. U.S. Pat. & Tm. Off.

Sonos products may be protected by one or more patents. Our patent-to-product information can be found here:

sonos.com/legal/patents

iPhone®, iPod®, iPad® and iTunes® are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

Android® is a trademark of Google, Inc.

MPEG Layer-3 audio decoding technology licensed from Fraunhofer IIS and Thomson.

Sonos uses MSNTP software, which was developed by N.M. Maclaren at the University of Cambridge.

© Copyright, N.M. Maclaren, 1996, 1997, 2000; © Copyright, University of Cambridge, 1996, 1997, 2000.


All other products and services mentioned may be trademarks or service marks of their respective owners.

©2004-2012 by Sonos, Inc. All rights reserved.

SONOS DOCK

- Allows you to play your favorite music from an iPod® or iPhone® on a Sonos system — all throughout your home. The DOCK is compatible with*:
 - iPod touch (1st, 2nd 3rd, and 4th generation)
 - iPod classic
 - iPod nano (3rd, 4th, 5th, and 6th generation)
 - iPhone 4, 4S, iPhone 3GS
 - iPhone 3G, iPhone
- Charges while it's seated in the DOCK. The DOCK supports 1 Amp charging, the latest specification from Apple®.
- Is great for parties — simply have your friends dock their iPod or iPhone for play back on your Sonos system.

* For the latest system requirements or compatible audio formats, go to <http://faq.sonos.com/specs>.

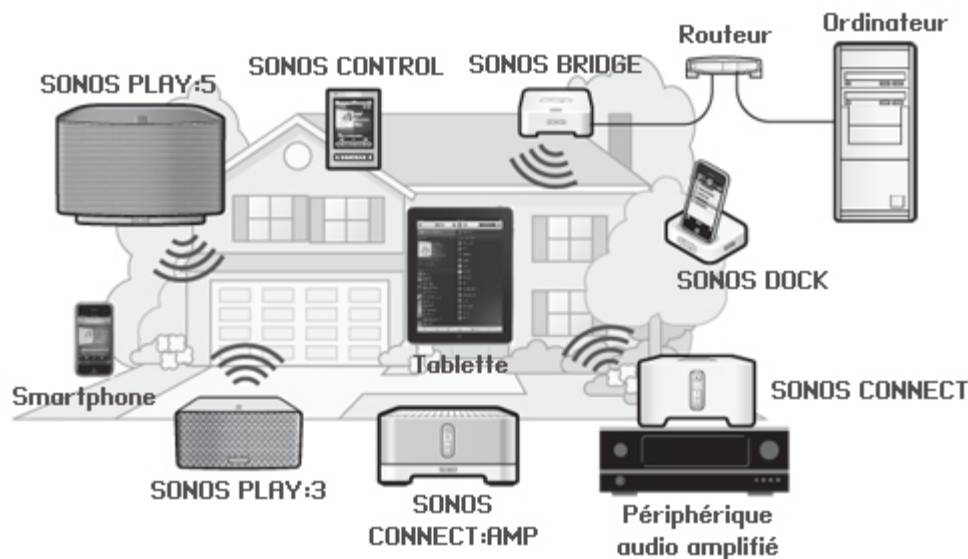

New to Sonos?

Set up at least one Sonos player (PLAY:3, PLAY:5, CONNECT [ZP90], or CONNECT:AMP [ZP120]) before adding the DOCK to your Sonos system. For help with this step, refer to the instructions packaged with your Sonos components.

- If a software update is available, be sure to update your Sonos system before adding the SONOS DOCK.

Adding to an existing Sonos system?

The SONOS DOCK allows you to play music stored on your docked iPod or iPhone in any or every room of your home, all perfectly synchronized.

1. Attach the power adapter and plug in the SONOS DOCK.
2. Choose one of the following options:
 - Using any handheld Sonos controller: Select **Add a Sonos Component** from the **Settings** menu.
 - Using the Sonos Controller for Mac or PC: Select **Add a Sonos Component** from the **Manage** menu.



During the setup process, you will be prompted to press and release the **Join** button on the back of the DOCK. The indicator lights flash green and white while the DOCK is connecting.

You may be prompted to update the DOCK after you add it to your Sonos system.

- If the indicator lights begin to flash green and red alternately, it means your DOCK and one or more Sonos components are not on the same SONOS software version. Please check for software updates by selecting **Manage -> Check for Software Updates** (PC) or **Sonos -> Check for Updates** (Mac).

Note: See "LED Explanations" for additional status indicator explanations, please.



Autoplay Mode

Autoplay mode provides a seamless transition between your portable and home audio experience. You can walk in the door, place your device in the SONOS DOCK, and the music that's playing on your iPod or iPhone automatically starts playing over Sonos. You will be prompted to select an Autoplay room during setup. You can change the autoplay room anytime (see "Changing DOCK Settings" on page 4.)

While your device is seated in the DOCK in autoplay mode, you can select music directly from the device. You can switch to accessory mode at any time to make music selections and control playback using a Sonos controller.

- To switch to accessory mode, simply start browsing the music on your iPhone or iPod using any Sonos controller — playback control automatically shifts to your Sonos system.
- To return to autoplay mode, simply undock and redock your device.

Note: When your iPhone is seated in the DOCK in Autoplay mode, the ringtone for incoming calls will play through your Sonos system. If you do not want to hear ringtones or other system sounds associated with your device, simply set the iPhone ringer switch (located on the left side of your phone) to silent.

Selecting Music

You can select music directly from your device when it is seated in the DOCK (autoplay mode), or you can use any Sonos controller to make music selections and control playback (accessory mode).

Using a handheld Sonos controller

1. Place a compatible device in the DOCK (see "SONOS DOCK" on page 1 for a complete list.)
2. Select **Docked iPods** from the **Music** menu.
3. Select the device you want to play back.
4. Choose one of the following options:
 - Select **Play Now** to begin playback.
 - Select **Browse** to search for music selections.

Using the Sonos Controller for Mac or PC

1. Place a compatible device in the DOCK (see "SONOS DOCK" on page 1 for a complete list.)
2. Select **Docked iPods** from the **MUSIC** pane.
3. Select the device you want to play back.
4. Choose one of the following options:
 - Click **Play Now**.
 - Select **Browse** to look for a music selection, click ▼ located to the right of the selected item, and then click **Play Now**.

Changing DOCK Settings

You can change your SONOS DOCK settings anytime.

Using a handheld Sonos controller

1. Select **DOCK Settings** from the **Settings** menu.
2. Select the SONOS DOCK you want to make changes for.
3. Choose one of the following options:
 - Select **DOCK Name** to type a new name for the DOCK (the default name is DOCK.)
 - Select **Autoplay Room** to select the room that will automatically play audio when you start music directly from an iPod or iPod touch and then place it in the DOCK.
 - Select **Include Grouped Rooms** to include (yes) or exclude (no) currently grouped rooms from Autoplay mode.
 - Select **Autoplay Volume** to adjust the volume level for the Autoplay room.
 - Select **White Status Indicator Light** to turn the white status indicator on or off when the DOCK is in normal operation.

Using the Sonos Controller for Mac or PC

1. Select **Manage** -> **Settings** (PC) or **Sonos** -> **Preferences** (Mac).
2. Select **DOCK Settings**, and then choose the DOCK you want to change in the **DOCK Settings** for drop-down.
 - Type a custom name in the **DOCK Name** box (the default name is DOCK), and then click (PC) or press **Enter** (Mac) to apply it. You can delete a custom room name before applying it by clicking (PC).
 - Select **White Status Light** to turn the white status indicator on or off when the DOCK is in normal operation.
 - Select **Autoplay Room** to select the room that will automatically play audio when you start music directly from an iPod or iPod touch and then place it in the DOCK.

SONOS DOCK Front



Volume Up (+)
Volume Down (-)

Press the buttons on the side of the DOCK to adjust the volume up and down.

SONOS DOCK Back



Join button

Press the **Join** button to join the DOCK to your Sonos system.

DOCK status indicator

- LED Flashes white when powering up; flashes green and white when connecting to your Sonos system.
- LED Solid white when powered up and connected to your Sonos system (normal operation).
- LED Flashes red if the device in the DOCK is not a supported model. (For a complete list, see "LED Explanations".)

AC power (mains) input

Use the supplied power adapter to connect to power outlet. Be sure to use the proper power adapter for your country.

LED Explanations

DOCK Status Indicator	Mute Button Indicator	State	Additional Information
Solid white	Off	Powered up, connected to the network	You can turn the white light off so it does not display when your DOCK is in normal operation.
Solid white	Solid green	Muted	
Flashing white	Off	Powering up (booting)	
Flashing white	Flashing green	Powered up, not connected to a Sonos system	Flashing in unison.
Flashing white	Flashing green	Looking for a Sonos system to join.	Flashing alternately.
Flashing orange	Flashing green	DOCK was unable to join the Sonos system.	<p>You may need to update your Sonos software. Choose one of the following to check for updates:</p> <ul style="list-style-type: none"> Using a handheld Controller: Select Online Updates from the Settings menu. Using a Sonos Controller for PC: Select Manage -> Check for Software Updates. Using a Sonos Controller for Mac: Select Sonos -> Check for Updates. <p>Or, the device in the DOCK may not be compatible. See "SONOS DOCK" on page 1 for a list of compatible devices.</p>
Flashing red, followed by a repeating pattern of: White or Amber flashing alone, then Green and Amber flashing in unison		Diagnostics mode	<p>You may be instructed to enter Diagnostics mode by a technician when you call Customer Support to report a problem.</p> <p>If you accidentally enter diagnostics mode, press the Join button to exit.</p>

Important Safety Information

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry soft cloth. Household cleaners or solvents can damage the finish on your Sonos components.
7. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
8. Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
9. Only use attachments/accessories specified by the manufacturer.
10. Unplug this apparatus during lightning storms or when unused for long periods of time.
11. Refer all servicing to Sonos qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cable or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. The Mains plug should be readily available to disconnect the equipment.
13. **Warning:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
14. Do not expose apparatus to dripping or splashing and do not place objects filled with liquids, such as vases, on the apparatus.