

1 電源コードを接続

Sonos Fiveの設置位置を決めて、電源コードを接続します。




2 Sonosアプリをダウンロード



Sonosアプリを開いて[追加]をタップするか、
[設定]>[システム]>[製品を追加する]
に移動します。

操作ガイド

Sonosアプリでコンテンツを再生、操作することも、
Sonos Five本体からタッチ操作することもできます。

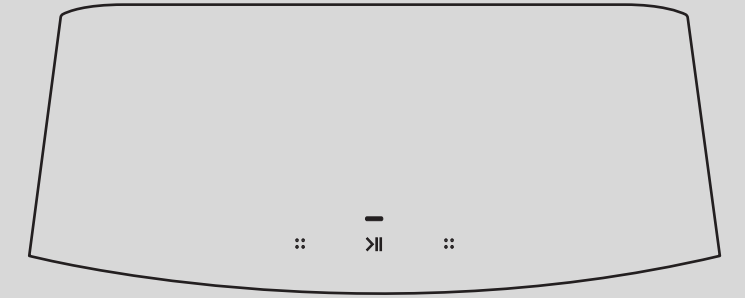

>|| 再生/一時停止
1回押す

>|| グループ化
長押ししてSonos製品をグループ化

:: >|| ::
音量
左を押すと下がり、右を押すと上がる

:|>||>::
次のトラック
右へスワイプ

::<||<|:
前のトラック
左へスワイプ

サポート

カスタマーサポート
sonos.com/support

ユーザーガイド
sonos.com/guides/five

ご利用規約、使用許諾契約
www.sonos.com/legal/terms-of-use


Terms of Use, License and Warranty
www.sonos.com/legal/terms-of-use

© 2021 Sonos, Inc. All rights reserved. Sonos®, Sonos FiveおよびFiveは、Sonos, Inc.の商標または登録商標です。*Reg. U.S. Pat. & TM Off.

© 2021 Sonos, Inc. All rights reserved. Sonos®, Sonos Five, and Five are trademarks or registered trademarks of Sonos, Inc. *Reg. U.S. Pat. & TM Off.



640-00865-A

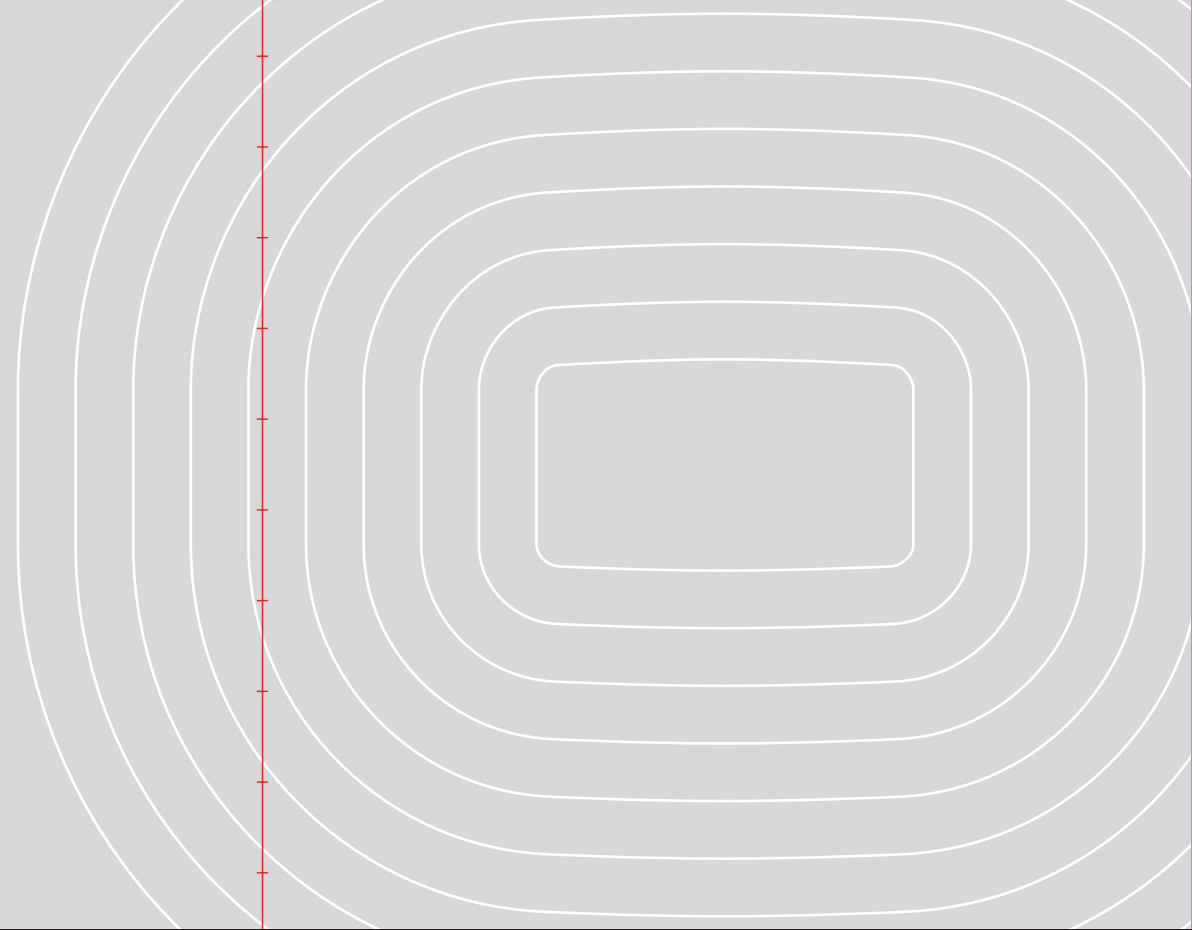

English - Set Up

1. **Connect the power cord.** Choose a location for your Five and plug it in.
2. **Download the Sonos app.** Open the Sonos app and tap Add, or go to **Settings>System>Add Product.**

At a glance. Play and control your content using the Sonos app or the touch controls on your Sonos Five. **Play/Pause;** Single press. **Group;** Press and hold to group Sonos products. **Volume;** Press left to decrease, right to increase. **Next Track;** Swipe right. **Previous Track;** Swipe left.

SONOS

Five

設定