


1 Sonos Moveを電源に接続する

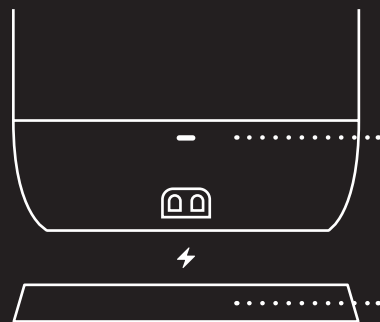

USB-Cポート

外出時の充電には、互換性のあるUSB-C充電器を使用してください。

充電ベース

充電ベースを電源に挿し込み、Sonos Moveをベースに置きます。

2 Sonosアプリをダウンロードする




ダウンロード済みの場合

Sonosアプリを開いて[追加]をタップするか、[設定]>[システム]>[製品を追加する]に移動します。

操作ガイド

ご自宅でのSonos Moveの設定やリスニングにはWiFiを使用します。WiFiに接続できない場合はBluetooth®に切り替えます。

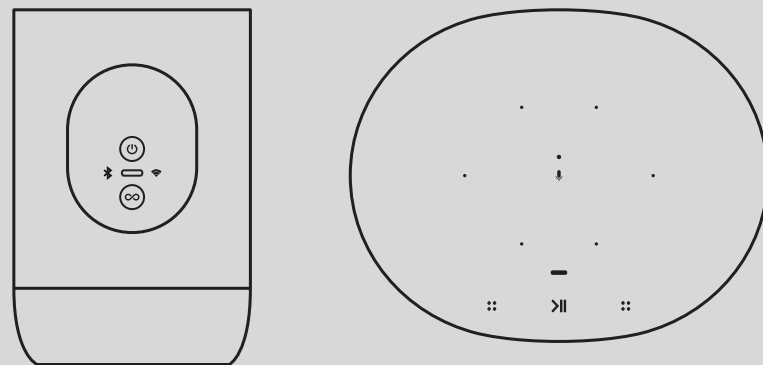

電源

オン / オフ



モード

Bluetooth / WiFi



接続

設定中に押します



再生 / 一時停止

1回押す



グループ化

長押ししてSonos製品をグループ化します




音量

左を押すと下がり、右を押すと上がります




マイク

ワンプッシュで音声アシスタントとマイク関連の機能を起動します



次のトラック

右へスワイプ



前のトラック

左へスワイプ

注意: 音声操作に対応していない国や地域があります。この機能は、お住まいの地域でSonosが音声サービスに対応次第、ご利用いただけます。

カスタマーサポート

カスタマーサポート
sonos.com/support

ユーザーガイド
sonos.com/guides/move

ご利用規約、使用許諾契約、保証 www.sonos.com/legal/terms-of-use


Terms of Use, License and Warranty www.sonos.com/legal/terms-of-use

© 2021 Sonos, Inc. All rights reserved. Sonos*, Sonos MoveおよびMoveは、Sonos, Inc.の商標または登録商標です。*Reg. U.S. Pat & TM Off.

© 2021 Sonos, Inc. All rights reserved. Sonos*, Sonos Move, and Move are trademarks or registered trademarks of Sonos, Inc.*Reg. U.S. Pat & TM Off.



640-00801-A

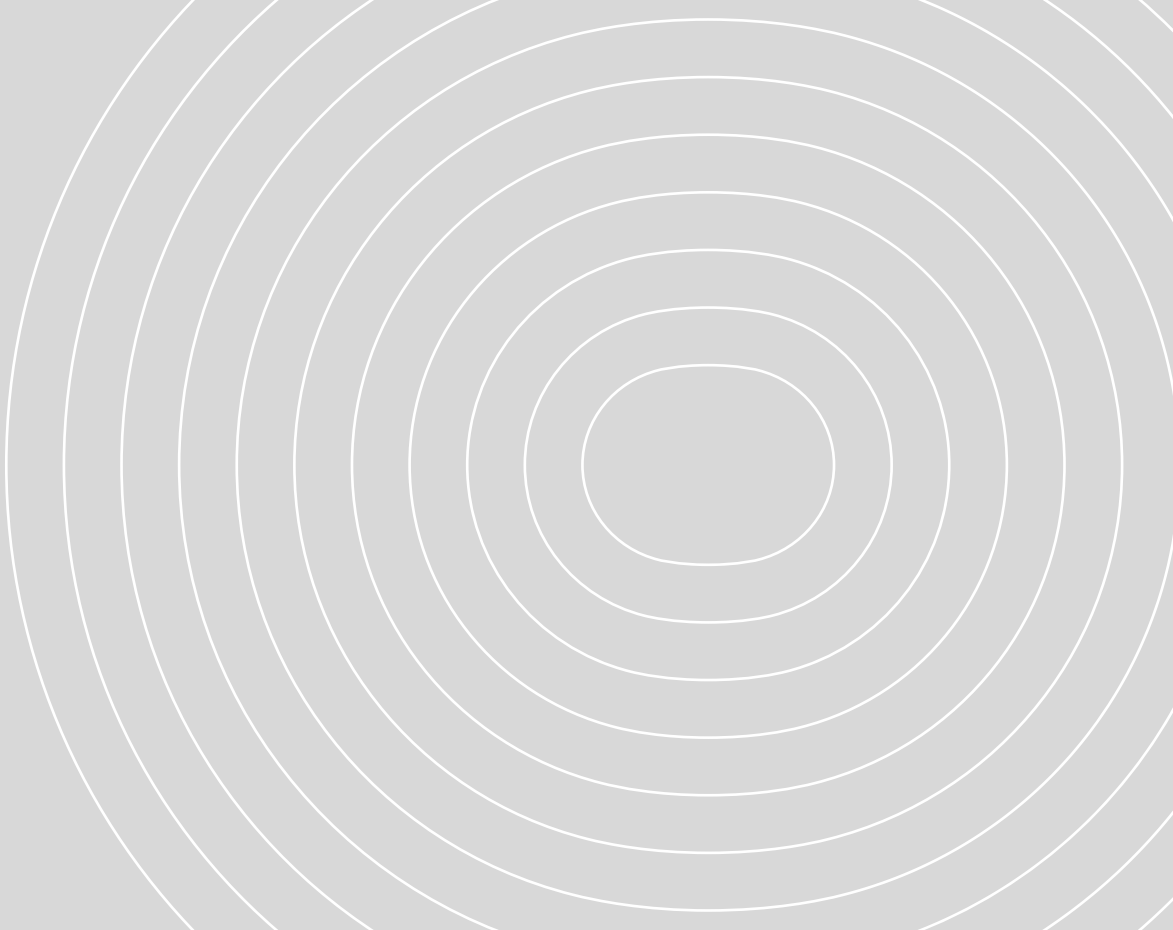

SONOS

設定

English – Set Up

1. **Connect Move to power. USB-C port** - Use a compatible USB-C charger for charging on the go. **Charging base** - Plug the charging base into a power outlet and put Move on the base.
2. **Download the Sonos app. Already have Sonos?** Open the Sonos app and tap Add, or go to **Settings > System > Add Product**.

At a glance. Use WiFi to set up Move and for listening at home. Switch to Bluetooth® when WiFi isn't available. **Power** - On / off. **Mode** - WiFi / Bluetooth. **Join** - Press during setup. **Play / Pause** - Single press. **Group** - Press and hold to group Sonos products. **Volume** - Press left to decrease, right to increase. **Microphone** - Press for voice assistants and microphone-related features. **Next Track** - Swipe right. **Previous Track** - Swipe left.

Move