

帮助

客户支持

sonos.com/support

用户指南

sonos.com/guides/era300

使用条款、许可与担保协议
www.sonos.com/legal/terms-of-use

© 2023 Sonos, Inc. 保留所有权利。Sonos®、Sonos Era 300 和 Era 300 是 Sonos, Inc. 的商标或注册商标。*Reg. U.S. Pat. & TM Off.

© 2023 Sonos, Inc. All rights reserved. Sonos®, Sonos Era 300, and Era 300 are trademarks or registered trademarks of Sonos, Inc. *Reg. U.S. Pat. & TM Off.



610-00155 - A

设置

English – Set Up

1. **Connect the power cord.** Choose a location for your Sonos Era 300, leaving at least 8" clearance around the speaker.
2. **Download the Sonos app for setup.** Open the Sonos app and tap Add, or go to Settings > System > Add Product.

At a glance. Use WiFi to set up Sonos Era 300. Stream content over WiFi or Bluetooth®. **Volume Down** – Slide left (or tap -). **Volume Up** – Slide right (or tap +). **Previous Track. Play / Pause. Next Track. Group** – Press and hold to group Sonos products **Voice Services** – Tap to turn on or off. **Microphone Switch** – When it's turned off, all microphone-dependent features including voice services are unavailable. **Bluetooth** – Long press to pair new device; short press to reconnect.

繁體中文 – 設定

1. 連接電源線。選擇 Sonos Era 300 安置地點，並在喇叭周圍留出至少 8 英吋的間隙。
2. 下載 **Sonos** 應用程式進行設定。打開 Sonos 應用程式並輕觸「新增」，或前往「設定」>「系統」>「新增產品」。


簡介。使用 WiFi 設定 Sonos Era 300。透過 WiFi 或藍牙串流內容。降低音量 - 向左滑動（或輕觸 - 號）。提高音量 - 向右滑動（或輕觸 + 號）。上一首曲目。播放/暫停。下一首曲目。組合 - 長按以組合 Sonos 產品。語音服務 - 輕觸以開啟或關閉。麥克風開關 - 麥克風關閉時，需要麥克風的功能，包括語音服務，將無法使用。藍牙 - 長按配對新裝置；短按重新連接。

SONOS

Era 300

1

连接电源线

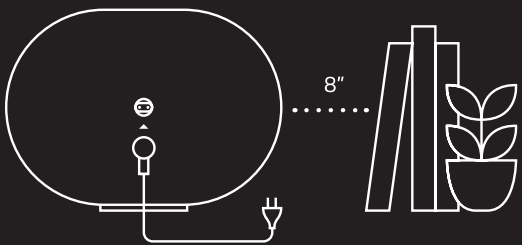

为Sonos Era 300选择位置，
在音响周围留出至少20厘米（8英寸）的间隙。

2

下载Sonos App 进行设置



打开Sonos App，然后点按“添加”，
或转到“设置”>“系统”>“添加产品”。

概览

使用Wi-Fi设置Sonos Era 300。 通过Wi-Fi或蓝牙流式播放内容。



减小音量

向左滑动（或者点按 -）

增大音量

向右滑动（或者点按 +）

<
上一首

> ||
播放/暂停

>
下一首

> ||
并组

按住以对Sonos产品进行分组



语音服务

轻按即可打开或关闭



麦克风开关

当其关闭时，所有与麦克风相关的功能
（包括语音服务）都将不可用



蓝牙

长按配对新设备；短按重新连接

注：并非所有国家/地区都支持语音控制。Sonos和语音服务提供商在您所在地区共同推出语音服务后，即可使用此功能。