

SONOS

Playbar

Product Guide



THIS DOCUMENT CONTAINS INFORMATION THAT IS SUBJECT TO CHANGE WITHOUT NOTICE.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including but not limited to photocopying, recording, information retrieval systems, or computer network without the written permission of Sonos, Inc. Sonos and all other Sonos product names and slogans are trademarks or registered trademarks of Sonos, Inc. Sonos Reg. U.S. Pat. & Tm. Off.

Sonos products may be protected by one or more patents. Our patent-to-product information can be found here:

[sonos.com/legal/patents](#)

AirPlay®, Apple Music™, FairPlay®, iPad®, iPhone®, iPod®, Tunes®, and OS X®, are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows® is a registered trademark of Microsoft Corporation in the United States and other countries.

Android™ is a trademark of Google, Inc.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

Amazon, Kindle, Kindle Fire, Echo, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logos are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Sonos uses MSNTP software, which was developed by N.M. Maclaren at the University of Cambridge.

© Copyright, N.M. Maclaren, 1996, 1997, 2000; © Copyright, University of Cambridge, 1996, 1997, 2000.

All other products and services mentioned may be trademarks or service marks of their respective owners.

June 2018

©2004-2018 by Sonos, Inc. All rights reserved.

Playbar

Flood any room with epic, full-theater sound and wirelessly stream all the music on earth through one easy-to-use speaker.

- Sophisticated 9-speaker design
- Connects to your TV using a single optical cable and plays everything that's connected to the TV, including cable boxes and game consoles
- Can be placed flat on a TV stand or mounted horizontally above or below the TV
- Compatible with Dolby® Digital and stereo



It takes just a few minutes to get your Playbar® up and running—see [**What you need**](#) to get started. Once you've got it set up, you can add additional Sonos products any time.

New to Sonos?

Download the app from the app store on your mobile device. Open the app and we'll guide you through setup. If you're using a computer, get the app at www.sonos.com/support/downloads.

For the latest system requirements and compatible audio formats, go to <http://faq.sonos.com/specs>.

Note: Sonos recommends using the Sonos app on a mobile device instead of a computer for setup.

Already have Sonos?

You can easily add new speakers anytime (up to 32).

Just plug in the speaker, open the app and tap **... > Settings > Add a Player or Sub**.

If you're using a computer, go to **Manage > Add a Player or Sub**.

What's in the box

- Sonos Playbar
- Power Cord
- 5 ft. /1.5m TOSLINK Optical Audio Cable
- Ethernet Cable
- Quick Start Guide
- Important Product Information Booklet

What you need

Here's what you need to set up Playbar:


- **TV** with an **optical digital audio OUT** port.
- **Wi-Fi**—have your network name and password ready.
- A **mobile device or computer** connected to the same Wi-Fi.
- **Sonos app** installed on the mobile device or computer you're using to guide you through setup.

Select a location

You can mount the Playbar to a wall above or below your TV or place it on a credenza.

Placed on a credenza

- Place horizontally on a stable and level surface at least 2" (50mm) from TV.
- Don't place vertically or on its side.
- Don't block the TV's IR sensor.
- For best sound quality, place with the connector panel **toward** the TV (Sonos logo is closer to TV).
- Don't place in a cabinet or on a shelf.
- Keep both ends of the Playbar at least 1' (30cm) from a wall or other obstruction.

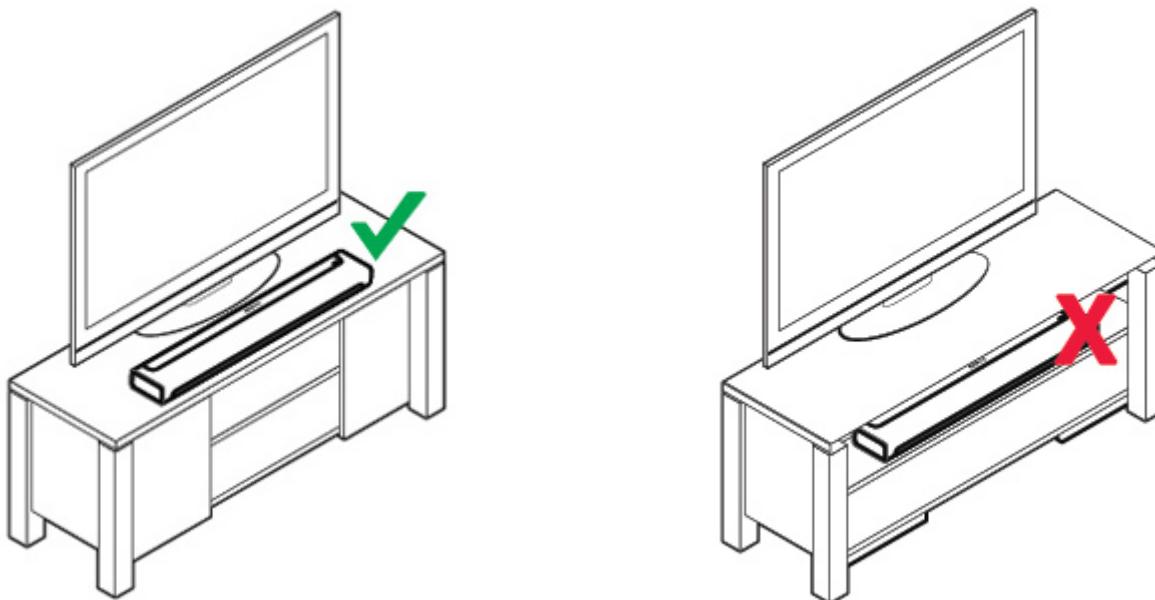

Wall mounted

Use the Playbar wall mount kit. You can buy it on www.sonos.com. Follow the instructions in the kit. See [Wall mounting](#) for instructions.

Connect the cables


Before you start

1. Disconnect existing home theater or surround sound equipment from your TV.
2. Connect any external devices, such as a cable box or DVD player, directly to your TV.


Connect the soundbar to your TV

1. Remove the protective cap from each end of the optical audio cable.
2. Connect the optical audio cable from your TV's digital audio **OUT** (optical) to the Playbar's digital audio **IN** (optical). Do not twist or bend the cable.


Note: The Playbar's digital audio IN port and the optical cable are 'D-shaped'—make sure the connector aligns correctly into the port.

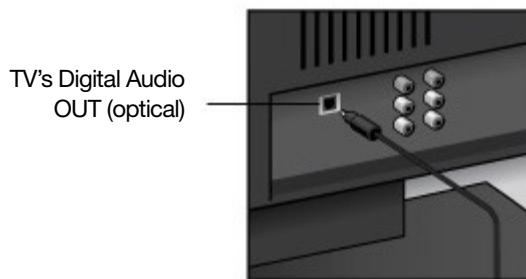


IMPORTANT: Remove the protective caps from each end of the optical audio cable before inserting.

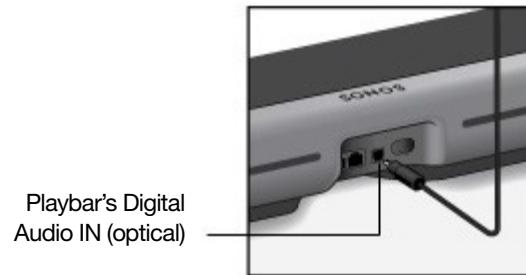


3. Attach the power adapter to the Playbar and apply power. *Push the power cord firmly into the Playbar until it is flush with the surface.*

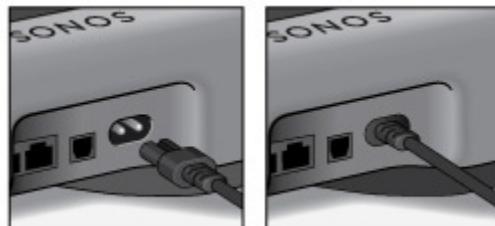

The speaker status light on the right side flashes.

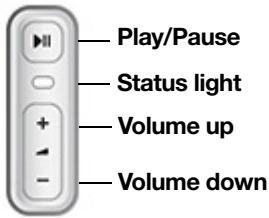

Explore Playbar

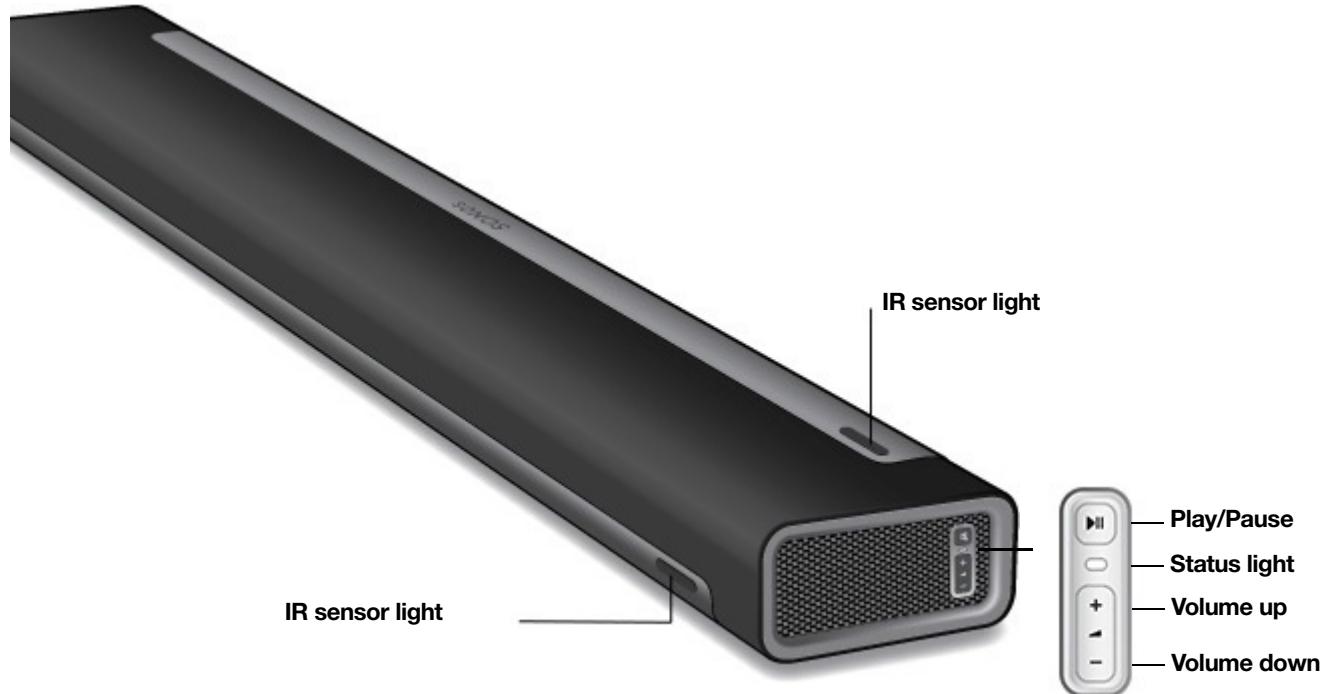

Note: The grill cloth is not removable. Tampering with the cloth may damage your Playbar.


Controls


+ -	Volume Up (+) Volume Down (-)	Press to adjust the volume. Note: You can also use the app and remote control.
>	Play/Pause	Press to <u>Play or pause sound</u> .

Status lights

Speaker status	For more information, see http://faq.sonos.com/led .
IR (InfraRed) Sensors / Signal Lights	The IR sensor receives signals sent by a remote control. When the Playbar receives a volume or mute command, the IR light displays momentarily. You can adjust this setting so the light never displays. See IR signal light .

Connector panel

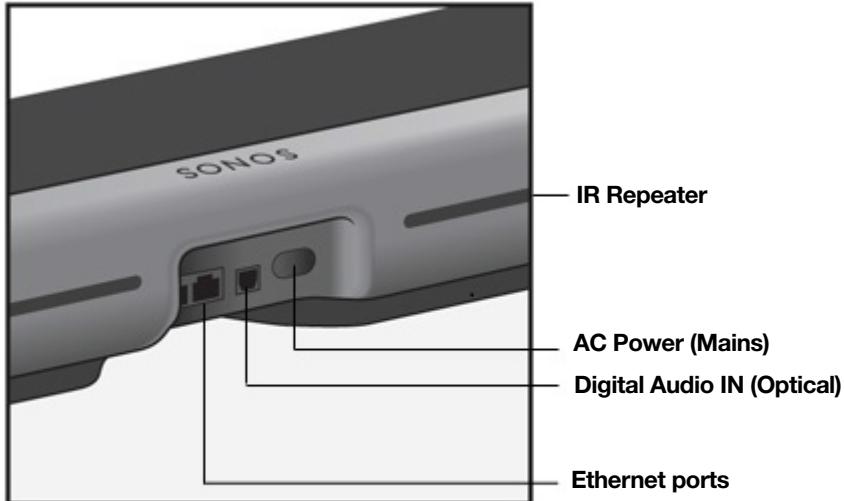

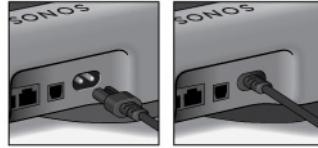Ethernet Ports (2)	Use the supplied Ethernet cable if you want to connect to a router, computer, or network-attached storage (NAS) device (optional).
Digital Audio IN (Optical)	Use an audio optical cable to connect the Playbar to your TV.
	
AC Power (Mains) Input	<p>Use only the supplied power cord (using a third-party power cord will void your warranty).</p> <p>Note: Insert the power cord firmly until it is flush with the speaker.</p> 
IR Repeater	Allows the commands from your remote control to reach your TV if the Playbar is positioned in front of the TV. This setting is on by default, but can be turned off. See IR repeater for more information.

Adjust TV and sound settings

Use the app to change sound settings or modify the way your home theater speaker works with your TV. Refer to the *Sonos App for Mobile Devices product guide* to get more information about using the Sonos app.

Note: You can also use the Sonos app for Mac or PC.

TV Dialog Settings

If TV audio is out of sync with video, use the app to adjust the audio delay (lip sync).

1. Tap **...** > **Settings** > **Room Settings** and select the room.
2. Tap **Advanced Audio** > **TV Dialog Settings**.
3. Drag your finger across the **Audio Delay (Lip Sync)** slider to increase or decrease the sound delay.

TV Autoplay

Turn on TV Autoplay (default) so audio plays directly through the home theater speaker when you turn on your TV.

If music is playing when you turn on the TV, the music stops and the home theater speaker switches to TV audio.

1. Tap  > **Settings** > **Room Settings** and select the room.

2. Tap **TV Setup and Control** > **TV Autoplay**.

If the home theater speaker is part of a group when the TV is turned on, it drops from the group (default).

3. Select **On** or **Off**.

Ungroup on Autoplay

You can include your home theater speaker in a group if you're playing music in a group of rooms.

Turn on **Ungroup on Autoplay** to ungroup your home theater speaker when you turn on the TV (default).

1. Tap  > **Settings** > **Room Settings** and select the room.

2. Tap **TV Setup and Control** > **Ungroup on Autoplay**.

Enhance TV sound

When you're watching TV, the Now Playing screen in the app includes sound enhancement features. These features are only visible when you're looking at the room where your home theater speaker is located.

Speech Enhancement

Makes TV dialog easier to hear.

Tap  on the Now Playing screen to turn on or off.

Night Sound

Enhances quiet sounds and reduces the intensity of loud sounds. Turn on to reduce the volume while still experiencing proper balance and range.

Tap  on the Now Playing screen to turn on or off.

Tune your room with Trueplay™

Every room is different. With Trueplay tuning, you can put your speakers wherever you want. Trueplay analyzes room size, layout, décor, speaker placement, and any other acoustic factors that can impact sound quality. Then it adjusts how each woofer and tweeter produces sound in that room (works on mobile devices running iOS 8 or later).

Tap  > **Settings** > **Room Settings**. Pick a room and tap **Trueplay Tuning** to get started.

Note: Trueplay tuning isn't available if VoiceOver is enabled on your iOS device. If you want to tune your speakers, first turn VoiceOver off in your device settings.

Program your remote control

During setup, you'll program your remote control.

You can program a different remote control any time.

1. Open the app and tap **••• > Settings > Room Settings**.

Note: You can also use the Sonos app for Mac or PC to program your remote.

2. Choose the room.
3. Tap **TV Setup and Control > Remote control setup**.

Note: Some TVs show unnecessary messages when you adjust the volume. You may be able to turn these off. See [Eliminating annoying messages on your TV when using a universal remote](#).

IR signal light

A light displays on the Playbar when an IR signal is being sent. If desired, you can adjust this setting so the IR light never displays. This setting is *On* by default.

On a mobile device:

1. Go to **••• > Settings > Room Settings**.
2. Select the room the Playbar is located in.
3. Select **TV Setup and Control > IR Signal Light**.
4. Select **On** or **Off**.

On a computer:

1. Select **Manage > Settings (PC)** or **Sonos > Preferences (Mac)**.
2. Select **Room Settings** if it is not already highlighted on the left.
3. Choose the room the Playbar is located in from the *Room Settings* drop-down list.
4. Select the **TV Setup** tab.
5. Check the **IR Signal Light** checkbox to turn this setting on, uncheck to turn it off.
6. Close the **Settings** window when changes are complete.

IR repeater

When the Playbar is placed in front of your TV on a tabletop, it may block the IR sensor on your TV. The IR repeater setting allows the Playbar to repeat the signal to your TV. This setting is *On* by default.

On a mobile device:

1. Go to **••• > Settings > Room Settings**.
2. Select the room the Playbar is located in.
3. Select **TV Setup and Control > IR Repeater**.
4. Select **On** or **Off**.

On a computer:

1. Select **Manage > Settings** (PC) or **Sonos > Preferences** (Mac).
2. Select **Room Settings**.
3. Choose the room the Playbar is located in from the *Room Settings* drop-down list.
4. Select the **TV Setup** tab.
5. Check the **IR Repeater** checkbox to turn this setting on, uncheck to turn it off.
6. Close the **Settings** window when changes are complete.

Additional room settings

Tap **... > Settings > Room Settings** to see more room settings you can change, such as:

- Recalibrate audio (Android)
- Turn off the speaker status light
- Disable speaker touch controls
- Change room names
- Adjust EQ

Play music

Playbar can stream music even when the TV is off. If **TV Autoplay** is *On*, the music stops and switches to TV audio whenever you turn on the TV.

- **Radio by TuneIn.** Select from more than 100,000 free internet radio stations, podcasts, and shows.
- **Music services.** Explore and manage your music services—add your own or try something new.
- **Music stored on your mobile device.** Play music you've downloaded to your phone or tablet.
- **Music library.** Play music stored on your computer or any Network-Attached Storage (NAS) device.

For a full list of the music choices available in your country, go to www.sonos.com/music. For more information about playing music, check out our mobile app product guide at www.sonos.com/guides.

Play or pause sound

Touch **>||** to start or stop your TV's sound and your music's sound too.

- **TV**—When TV is on, press **>||** to toggle the sound on and off.
- **Music**—When TV is off, press **>||** to restart music.

Add music that's playing in another room

Press and hold **>||** to add music in another room.

Skip to next or previous song

- Press **>||** twice to skip the next song.
- Press **>||** three times to skip to the previous song.

Note: This doesn't work with radio stations.


Expand your home theater

You can add a Sub and surrounds to expand your home theater experience. Add them during setup, or anytime later by selecting **... > Settings**. The app guides you through setup.

- Add a Sub for room-filling bass.
- Add a pair of Sonos speakers as rear surrounds.
- Add both a Sub and pair of surrounds for full 5.1 home theater sound.

Placement guidelines

- **Sub**—place it either standing up or lying down; you can place it in a corner, against a wall, behind, under or next to any furniture on any floor surface.
- **Surround speakers**—place the speakers to the left and right of your main viewing position. They can be level with or behind the main viewing position. Make sure both have the same orientation (horizontal or vertical).

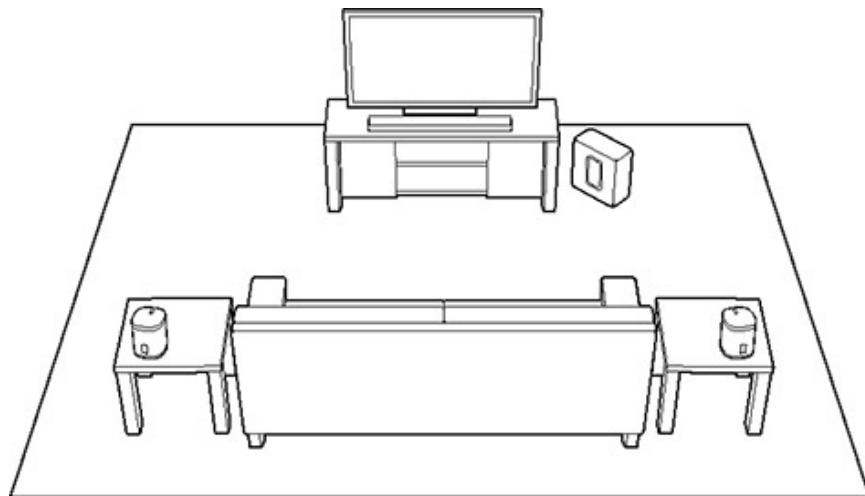

Sub

Add a Sub

You can pair a Sub with any Sonos speaker or amplified component.

On a mobile device:

1. Tap **... > Settings > Room Settings**.
2. Choose the room with the speaker you want to pair, and tap **Add Sub**.

On a computer:

1. Select **Manage > Settings (PC)** or **Sonos > Preferences (Mac)**.
2. Select **Room Settings**.
3. Choose the room with the speaker you want to pair from the *Room Settings* drop down list.
4. From the **Basic** tab, select **Add Sub**.

Change Sub settings

On a mobile device:

1. Tap **...** > **Settings** > **Room Settings**.
2. Select the room with the Sub. It appears as *Room (+Sub)*.
3. Select **Advanced Audio** > **Sub Settings** and change a setting.

Sub	Turn the Sub's sound On or Off .
Sub Level	Adjust the Sub's volume. (You can use this setting to match the subwoofer level to the level of your main speakers.)
Placement Adjustment (phase)	Turn On or Off .

On a computer:

1. Select **Manage** > **Settings** (PC) or **Sonos** > **Preferences** (Mac).
2. Select **Room Settings**.
3. Choose the room with the Sub from the *Room Settings* drop down list. It appears as *Room (+Sub)*.
4. Select the **Sub** tab and change a setting.

Sub	Turn the Sub's sound On or Off .
Sub Level	Adjust the Sub's volume. (You can use this setting to match the subwoofer level to the level of your main speakers.)
Placement Adjustment (phase)	Turn On or Off .

Remove a Sub

On a mobile device:

1. Tap **...** > **Settings** > **Room Settings**.
2. Select the room with the Sub. It appears as *Room (+Sub)*.
3. Select **Remove Sub**.
4. Choose one of the following:
 - To pair the Sub with a different speaker, select **Choose Room for Sub**.
 - If you're not using it, select **Don't use Sub**. It appears in Rooms as *Sub (unused)* until you pair it with a speaker.

On a computer:

1. Select **Manage > Settings** (PC) or **Sonos > Preferences** (Mac).
2. Select **Room Settings**.
3. Choose the room with the Sub from the *Room Settings* drop-down list.
4. From the **Basic** tab, click **Remove Sub**.
5. Choose one of the following:
 - To pair the Sub with a different speaker, select **Choose Room for Sub**.
 - If you're not using it, select **Don't use Sub**. It appears in Rooms as *Sub (unused)* until paired with a speaker.

Surround speakers

Turn two Sonos speakers (same model) into separate right and left channels for your home theater.

Note: If you create a room group or stereo pair instead, you won't have surround sound.

Add surrounds

On a mobile device:

1. Tap **... > Settings > Room Settings**.
2. Choose the room with the home theater speaker and tap **Add Surrounds**.

On a computer:

1. Select **Manage > Settings** (PC) or **Sonos > Preferences** (Mac).
2. Select **Room Settings**.
3. Choose the room with the home theater speaker from the *Room Settings* drop-down list.
4. From the **Basic** tab, select **Add Surround Speakers**.

Change surround settings

When you add your speakers as surrounds, surround sound is optimized for your room. You can adjust these settings:

Surrounds	Turn surround sound On or Off .
TV Level	Adjust surround volume for TV audio.
Music Level	Adjust surround volume for music.
Music Playback	Ambient (subtle) or Full (louder, full range). Doesn't apply to TV audio.
Balance Surround Speakers (iOS)	Manually balance your surround speakers.

On a mobile device:

1. Tap **... > Settings > Room Settings**.

2. Choose the room with the surround speakers (name includes (+LS+RS)).
3. Select **Advanced Audio > Surround Settings** and change the settings.

On a computer:

1. Select **Manage > Settings (PC)** or **Sonos > Preferences (Mac)**.
2. Select **Room Settings**.
3. Choose the room with the surrounds from the *Room Settings* drop-down list.
4. Select the **Surrounds** tab and change the settings.

Remove surrounds

If the speakers were part of your Sonos system before you added them as surrounds, they'll revert back to their previous room names. Otherwise, they'll appear as **Unused in Rooms**.

On a mobile device:

1. Tap **... > Settings > Room Settings**.
2. Choose the room with the surround speakers (name includes (+LS+RS)) and tap **Remove Surrounds**.

On a computer:

1. Select **Manage > Settings (PC)** or **Sonos > Preferences (Mac)**.
2. Select **Room Settings**.
3. Choose the room with the surrounds from the *Room Settings* drop-down list (name includes (+LS+RS)).
4. From the **Basic** tab, click **Remove Surrounds**.

Wall mounting

You can mount Playbar to a wall above or below a wall-mounted TV. Use the Playbar wall mount kit. You can buy it on www.sonos.com. Follow the instructions in the kit.

Caution: Do not use any other hardware to mount the Playbar.

Guidelines

- When mounting below a TV, keep 1" (25mm) space (minimum) between Playbar and TV.
- When mounting above a TV, keep 2" (50mm) space (minimum) between Playbar and TV.
- Preserve audio quality: make sure the connector panel faces away from the TV.
- Keep both ends of the Playbar at least 1 ft. (30cm) from a wall or other obstruction.


Note: Connect the power and audio cables to the Playbar before mounting to the wall.

What you need


- Masking tape
- Pointed tool (such as an awl)
- Phillips head screw driver
- Power drill with Phillips head attachment

Note: There are 2 spare screws (and anchors) included in the kit. Use these to provide additional reinforcement if you'd like.

1. Tape the template to the wall above or below your TV. Use a level.

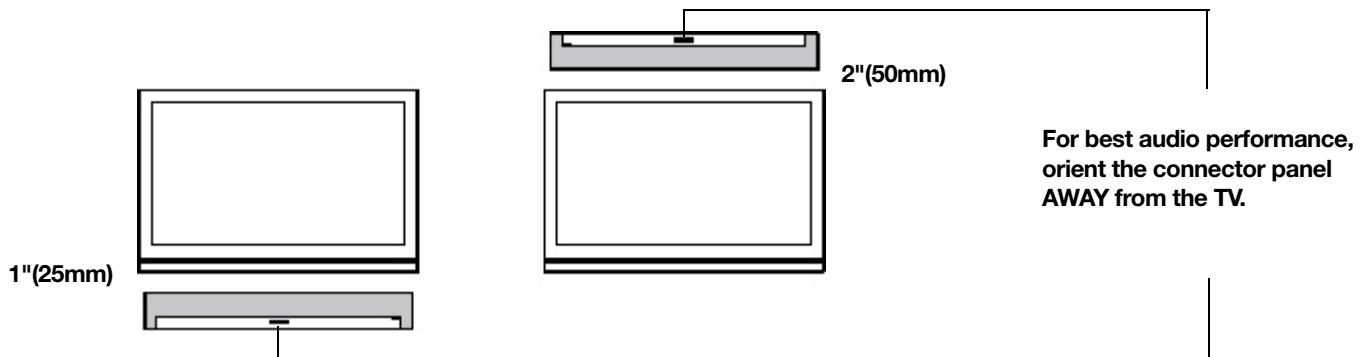

2. Use a pointed tool to pierce through the template and mark the mounting holes. Mark closer to the corners of the holes.


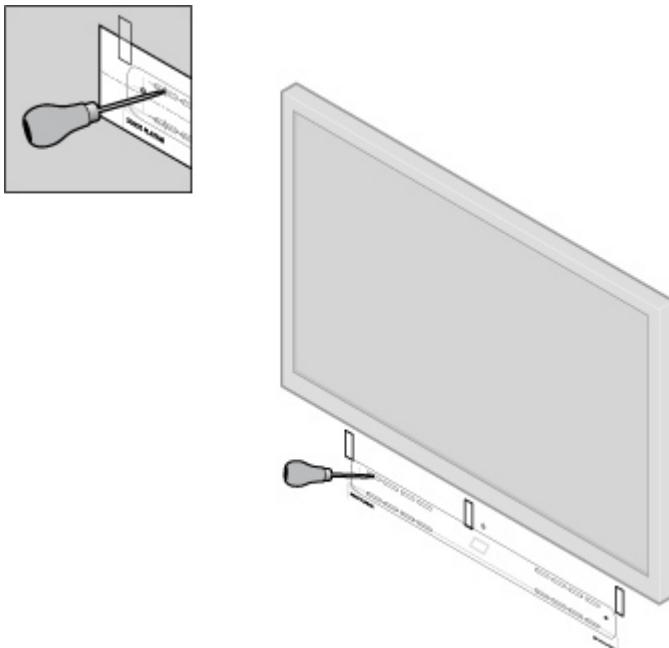


3. Remove the template.
4. Drill pilot holes.

Wall mounting information


Wall Material	Pre Drill	Use Wall Anchors	Use Screws
Wood Stud	1/8" (3mm) bit	No	Yes
Drywall (no stud)	3/16" (4.5mm) bit	Yes	Yes
Hard wallboard or double board	3/16" (4.5mm) bit	Yes	Yes
Plaster	1/4" (6.5mm) bit	Yes	Yes
Concrete or Brick	1/8" (3mm) bit	Yes	Yes

5. Insert and secure the wall anchors (don't use the anchors if drilling into wood).

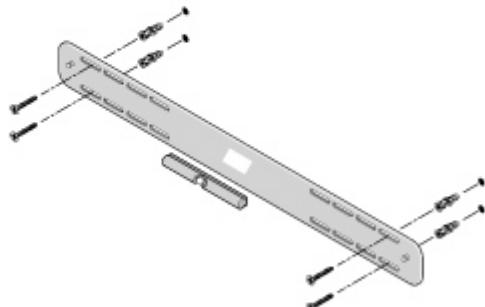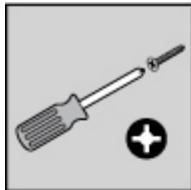

6. Place the bracket on the wall and loosely tighten the screws to secure the bracket. Check with a level and then tighten the screws.

7. Hang the Playbar securely on the bracket pegs.

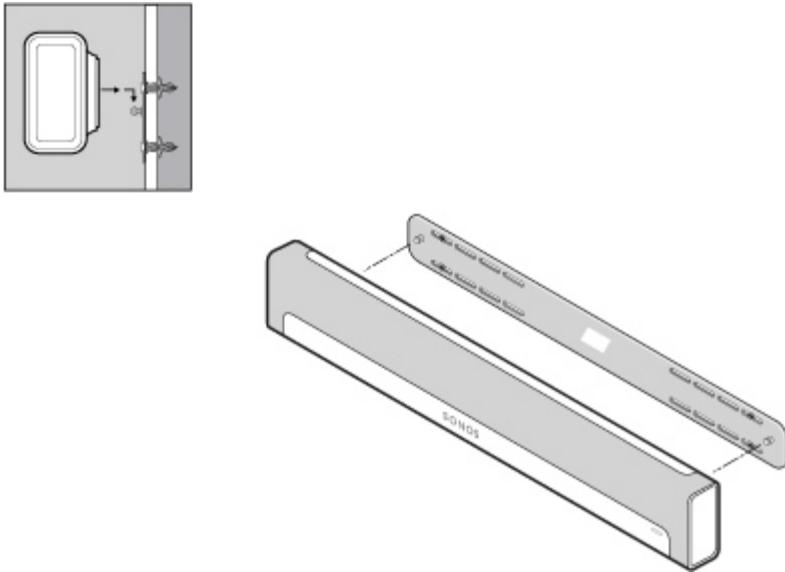

Turn Sonos on or off

Your Sonos speakers are designed to stay on; they use minimal electricity when not in use.

- To stop the music on a speaker: Touch >II (you can also use the app).
- To stop the music everywhere: In the app, tap > **Pause All**.

Troubleshooting

Warning: Do not open the product as there is a risk of electric shock. Under no circumstances should the product be repaired by anyone other than an authorized Sonos repair center, as this will invalidate the warranty. Please contact Sonos Customer Support for more information.

If a problem occurs, you can try the troubleshooting suggestions listed below. If one of these doesn't remedy the problem, or you are not sure how to proceed, please contact the Sonos Customer Support team and we'll be happy to help.

- **Customer Support**

- Visit our Playbar reference section at <http://moreinfo.sonos.com/PLAYBAR>
- Visit our website at www.sonos.com/support
- Email us at support@sonos.com

Playbar not detected during setup

- Did you allow Sonos to check for updates? *The Sonos Playbar requires software version 4.0 or later.*
- Is the power cord properly seated? *Be sure to push the power cord firmly into the Playbar until it is flush with the surface.*

- If either of these is not the problem, a network issue may be preventing the Playbar from connecting to Sonos. *Try moving the Sonos products closer together.*

Eliminating annoying messages on your TV when using a cable, satellite, or set top box remote

After you disable your TV speakers, your television might display an annoying or confusing message when you adjust the volume on the Playbar. This could be a message reminding you that your TV speakers are off, or a volume indicator unrelated to the sound from your Playbar. If you have a programmable remote control, you can try the steps below. These steps will configure your remote control to send volume commands that are only recognized by the Playbar so the message no longer appears when you increase or decrease the volume.

You will need to refer to the printed instructions that came with your remote control, or browse the on-screen help menu on your cable/satellite/set-top box as the specific details will vary. Please contact your cable service provider for additional help.

Identify an unused device key

Your remote control can likely control a variety of devices. The device keys are usually located at the top of the remote and labeled TV/Cable/CBL/STB/DVD/AUX. Identify a device key that is not currently being used (for example, the AUX key).

If your remote will not allow additional devices to be programmed, you might wish to purchase a universal remote to make it easier to control all your devices. Sonos recommends a Logitech® Harmony® universal remote. See [**If you are using a Logitech universal remote**](#) for more information.

Program the unused device key

Programming the unused device key will add new volume commands to your remote control.

To perform this step you will need to refer to the printed instructions that came with your remote control or browse the on-screen help menu on your cable/satellite/set-top box as the specific details will vary by manufacturer. If you cannot locate the instructions, contact your cable service provider for additional help.

- From the list of codes that can be programmed, select a Sonos code if it appears in the list.
- If Sonos does not appear in the list, select a code for any manufacturer brand **other than your TV or other devices** connected to the TV. For example if you own a Vizio TV and a Samsung Blu-ray player, choose a Panasonic code from the list.
- *DO NOT initiate an automated search for a code.*

Lock your remote control to the new volume commands

Locking volume control to the new device will ensure your remote always sends the new volume commands.

This feature is likely referred to as *volume lock* or *volume punch through* in the instructions that accompanied your remote control.

Configure your Playbar to work with these new volume commands

See [**Adjust TV and sound settings**](#) for help with this step.

Verify that the problem is solved

If the problem persists, try repeating the steps above, choosing a different manufacturer brand when programming the unused device key.

Eliminating annoying messages on your TV when using a universal remote

After you disable your TV speakers, your television might display an annoying or confusing message whenever you adjust the volume on the Playbar. This could be a message reminding you that your TV speakers are off, or a volume indicator unrelated to the sound from your Playbar. Try the steps below to configure your universal remote so this message no longer appears when you increase or decrease the Playbar's volume.

If you do not own a universal remote, Sonos recommends you purchase a Logitech® Harmony® remote.

If you are using a Logitech universal remote

If this remote is a new purchase, you will first need to set up a Logitech user account and install the Harmony Remote software. Then follow the steps below to add the Playbar as a new device.

1. Use the USB cable provided by Logitech to connect your Harmony remote to your computer.

Note: If this remote is a new purchase, you will need to set up a Logitech user account and install the Harmony Remote software before proceeding.

2. Launch the Logitech Harmony Remote software or go to www.logitech.com/myharmony and login to your account. (Where you are directed depends on the Logitech universal remote model you purchased.)
3. Select the **Add Device** setting.
4. Choose one of the following options:
 - If you are using Logitech Harmony Remote software:
 - Select **Sonos** as the manufacturer, and enter **Playbar** as the model name/number. If the Sonos Playbar is not in their database, you will be asked to add it.
 - Confirm that you've entered the information correctly, and then save your changes.
 - If you are using My Harmony website:
 - Type **Sonos** as the manufacturer and **Playbar** as the model name. If the Sonos Playbar is not in their database, you will be asked to confirm your entry or make another choice.
 - Confirm that you've entered the information correctly, and then save your changes.

If you are using another universal remote

Please follow the instructions in [Eliminating annoying messages on your TV when using a universal remote](#).

Turning off your television's speakers

During the setup process you are prompted to turn off your TV speakers so the sound comes only through the Playbar. While Sonos cannot provide instructions for every television model, please try the steps below.

If you cannot find the correct setting to turn off your TV speakers, please consult the owner's guide that was packaged with your television.

1. Select the **Menu** or **Setup** button on your television's remote control (not your cable remote control).
An on-screen menu will appear.
2. Select the menu option that controls your television's **audio** functions.

Note: This menu selection is most often labeled **Audio**, **Sound**, **Tools**, or **Options** or may display as a musical note icon.

3. Select the appropriate setting to **turn off** your TV speakers. Depending on your TV make and model, choices may include:

- **Off / On**
- **External Speaker / Television Speaker**
- **Audio System / Television Speaker**

The choice in **bold** will turn the TV speakers off.

- If none of these are applicable to your television, look for a setting that switches your TV output between variable and fixed and try switching the setting.

Can't turn off TV speakers

You should make every effort to turn off your TV's internal speakers. However some brands, including Toshiba and Dynex, may not include this setting. If you are unable to turn off the TV speakers, follow the steps below.

1. Using the volume control buttons on your television, turn the TV volume all the way down. Do not use the **Mute** button.
2. From this point forward use only the volume buttons on your Sonos app to adjust the Playbar's volume.

Your home network

Your Sonos speakers and the mobile device with the Sonos app need to be on the same Wi-Fi network.

Wireless network

Setting up Sonos on your home Wi-Fi is the answer for most homes. You just need:

- High-speed internet connection such as DSL/cable modem or fiber-to-the-home broadband connection
- High-speed DSL/cable modem (or fiber-to-the-home broadband connection)
- 2.4GHz 802.11b/g/n wireless home network

Note: Satellite internet access may cause playback issues.

Wired home network

Connect a Sonos Boost or speaker to your router with an Ethernet cable if:

- Your Wi-Fi is slow, temperamental, or doesn't reach all the rooms where you want to use Sonos.
- Your network is already in high demand with streaming video and internet usage and you want a separate wireless network just for your Sonos system.
- Your network is 5GHz only (not switchable to 2.4GHz).
- Your router supports only 802.11n (you can't change the settings to support 802.11b/g/n).

Note: For uninterrupted playback, use an Ethernet cable to connect the computer or NAS drive that has your music library files to your router.

Got a new router?

If you purchase a new router or change your internet service provider (ISP), you'll need to restart your Sonos products after the router is installed.

Note: If you keep a Sonos product connected to your router and an ISP technician connects it to the new router, then you'll only need to restart your other Sonos products.

1. After the router is set up, disconnect the power cords from your Sonos products for at least 5 seconds.
2. Reconnect all the power cords—if you keep a Sonos product connected to your router, start with that one. The speaker status light turns solid white on each product when the restart is complete.
If you don't have a Sonos product connected to your router, you'll need to change your network password in the Sonos app.

Change your network password

If you change your network password (and you don't have a Sonos product connected to your router), you'll need to update the password in the Sonos app.

1. Connect a Sonos speaker to your router with an Ethernet cable.
2. Choose an option:
 - On a mobile device, go to **...** > **Settings** > **Advanced Settings** > **Wireless Setup**.
 - On a PC, go to **Manage** > **Settings** > **Advanced**. On the **General** tab, select **Wireless Setup**.
 - On a Mac, go to **Sonos** > **Preferences** > **Advanced**. On the **General** tab, select **Wireless Setup**.
3. Enter the new network password.

Once the password is accepted you can unplug the speaker from the router and move it back to its original location.

Important safety information

Please read these instructions and heed all warnings. Keep them in a convenient location and make sure everyone in the household is aware of them.

Location

- Do not place the unit where it will be exposed to excessive heat (e.g., radiators, heat registers, stoves), direct sunlight, or a dusty environment (e.g., woodworking shop).
- Do not place the unit where it will be exposed to flammable liquids and/or fumes.
- Do not place the unit in a small confined space (e.g., closet or cabinet, under a bed or sofa) where ventilation is restricted. Both ends of the Playbar should be at least 1 ft. (30cm) from a wall or other obstruction.
- Protect the power cable from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it exits the product. The mains cord should be readily available to disconnect the power.
- The product should not be used near water—avoid close proximity to a bathtub, kitchen sink, laundry tub, wet basement, swimming pool, etc.
- If the unit is being wall-mounted, use the Playbar Wall Mount Kit (purchased separately) and follow the instructions carefully. Improper or inadequate installation could cause your device to fall, resulting in personal injury.

Proper ventilation

- Leave one inch of open space around the sides and above the unit to ensure proper ventilation.
- Ventilation should not be impeded by covering the ventilation openings with items such as tablecloths, curtains, or papers.
- Do not let foreign objects into the unit. If a foreign object should get into the unit, unplug the unit and contact Sonos for servicing guidance.

Usage

- Do not operate or handle the product with wet hands.
- Do not place any object on top of the product (e.g. vase, coffee cup, potted plant, books, magazines, etc.)
- Only use attachment/accessories specified by Sonos.
- Unplug the power cord during lightning storms or when unused for long periods of time.
- Never disassemble or modify the product in any way.
- If the Playbar is wall-mounted, never hang from the Playbar or the wall mount bracket.
- If the Playbar is wall-mounted, perform safety checks on a regular basis to ensure screws remain tightened securely.

Cleaning & maintenance

- Keep the Playbar fabric free from dust, pet hair, and other fine particles.
- To clean the fabric, use a vacuum with a hose or non-moving bristle attachment. Do not vacuum with a rotating bristle attachment.
- A lint **brush** can be used to smooth out visible lines in the fabric. Do not clean fabric with a lint **roller**.
- Clean non-fabric portions of the Playbar only with a dry, soft cloth. Household cleaners or solvents may damage the finish on your Sonos products.
- Do not use chemical solvents (e.g. alcohol, benzene, paint thinner) or other flammable cleaning liquids.
- Refer all servicing to Sonos qualified service personnel. Servicing is required when the unit or the power cord has been damaged in any way, if liquid or other foreign matter has fallen into the ventilation openings, or the unit has been exposed to rain or moisture.

Warning: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Specifications

Feature	Description
Audio	
Amplifier	Nine Class-D digital amplifiers perfectly tuned to match the speakers and acoustic architecture.
Speakers	Nine amplified speakers—six midrange and three tweeters. Playbar's automatic equalization means the system self-adjusts for rich, seamless performance.
3.0 Home Theater	Playbar's nine-speaker design plunges you into the cinematic action with huge waves of sound that capture every whisper and footfall. The player connects to your TV with a single cable and plays all sources, including satellite boxes and game consoles.
3.1 Home Theater	Pair Playbar with Sub, and with the push of a button you can add spine-curling bass to your cinematic experience—wirelessly.
5.1 Home Theater	Add speakers, such as two Play:5s, to your Playbar and Sub for a true surround sound experience. Sleek and understated with wireless control, this deeply immersive home theater experience wraps you in crystal-clear, state-of-the-art Sonos sound.
System Requirements	TV with optical audio output, broadband Internet, and a Sonos app.
Music	
Music Services Supported	Sonos works seamlessly with most music services, including Apple Music™, Deezer, Google Play Music, Pandora, Spotify and Radio by TuneIn, as well as downloads from any service offering DRM-free tracks. Service availability varies by region. For a complete list, see http://www.sonos.com/music .
Internet Radio Supported	Streaming MP3, HLS/AAC, WMA
Audio Formats Supported	Support for compressed MP3, AAC (without DRM), WMA without DRM (including purchased Windows Media downloads), AAC (MPEG4), AAC+, Ogg Vorbis, Apple Lossless, Flac (lossless) music files, as well as uncompressed WAV and AIFF files. Native support for 44.1kHz sample rates. Additional support for 48kHz, 32kHz, 24kHz, 22kHz, 16kHz, 11kHz, and 8kHz sample rates. MP3 supports all rates except 11kHz and 8kHz. Note: Apple “Fairplay”, WMA DRM and WMA Lossless formats not currently supported. Previously purchased Apple “Fairplay” DRM-protected songs may be upgraded.
Album Art Supported	JPEG, PNG, BMP, GIF
Playback Modes	Crossfade, shuffle, repeat
Playlists Supported	Napster, iTunes, WinAmp, and Windows Media Player (.m3u, .pls, .wpl)

Feature	Description
Networking	
Ethernet Port (2)	2-port switch allows a connection to your network or to other Sonos speakers.
Wireless Connectivity	
	Connects to your home Wi-Fi network with any 802.11 b/g/n router. 802.11n only network configurations are not supported—you can either change the router settings to 802.11 b/g/n or connect a Sonos product to your router.
SonosNet™ Extender	Functions to extend and enhance the power of SonosNet, a secure AES encrypted, peer-to-peer wireless mesh network dedicated exclusively for Sonos to reduce Wi-Fi interference.
General	
Side Panel Buttons	Volume Up, Volume Down and Mute
Side Panel LEDs	Indicates Playbar status
Power Supply	100 - 240 VAC, 50/60 Hz, auto-switchable
Dimensions (H x W x D)	3.35" (H) x 35.43" (W) x 5.51" (D), 85mm (H) x 900mm (W) x 140 mm (D)
Weight	11.9 lbs (5.4kgs)
Operating Temperature	32°F to 104°F (0°C to 40°C)
Storage Temperature	4°F to 158°F (-20°C to 70°C)
Package Contents	Playbar, AC power cord, optical audio cable, quickstart guide and legal booklet.
Multiple Orientations	Mount Playbar on the wall either above or below your TV, or lay flat on your TV table.
Control	Control Playbar volume and mute using your existing TV, cable or universal remote. Or download a free Sonos app to control Playbar from your smartphone, tablet, PC or Mac computer.
Supported Devices	Playbar works with all amplified and non-amplified Sonos products. Playbar connects to your TV using a single optical cable and plays all sources connected to the TV, including cable boxes and game consoles.

* Specifications subject to change without notice.

Product guide feedback?

We'd love to hear from you! We'll read your feedback carefully and use it to help us improve our product guides. Write to us at: docfeedback@sonos.com

If you're having a problem with your Sonos system, please contact Customer Care so they can help. Email them at <http://www.sonos.com/emailsupport>.

Need more help?

- Tap ... > **Help & Tips** to get some simple tips for getting the most out of your speakers.
- Visit our Frequently Asked Questions (FAQ) pages at www.sonos.com/support.
- Ask us a question at <http://www.sonos.com/emailsupport>.